

## WARRANTY

- Congratulations on the purchase of your new product. We wish you many years of listening pleasure.
- This warranty is valid for 12 months from the purchase date and applies to products that present a lack of conformity, provided that the product is used correctly, respecting its intended use and as provided in the instruction manual.
- During the warranty period, once the technical nature of the problem is proven, the product will be substituted.
- This warranty does not cover defects which are a result of: 1) damage caused by accident, unreasonable use or neglect; 2) damage resulting from failure to follow instructions contained in your owner's manual; 3) deterioration of components, the nature of which has become worn or weakened with use.

## HOW TO OBTAIN WARRANTY SERVICE

- Contact the store that sold you this product.
- To validate your right to this warranty, you must provide the original receipt/sales invoice, as proof of ownership and date of purchase.

[www.musicandstylecollection.com](http://www.musicandstylecollection.com)

To download the instruction manual and the warranty, please visit this website / Vi invitiamo a scaricare il manuale di istruzioni e la garanzia collegandosi al sito / Um die Bedienungsanleitung und garantie herunterladen besuchen Sie bitte folgende Webseite / Pour télécharger le manuel d'instructions et la garantie, veuillez visiter ce site Web / Lietošanas instrukcija un precas garantija atrodama mājas lapā / Для загрузки инструкции по использованию и гарантии зайдите на сайт / За да изтеглите ръководството за употреба и гаранцията, моля посетете / A használati utasítás és a garancia letöltéséhez kérem látogassa meg a weboldalt / Na následujícím odkazu si můžete stáhnout kompletní návod včetně záručních podmínek / Para baixar o manual de instruções e a garantia, visite este site / Para descargarse el manual de instrucciones y la garantía, visite este sitio web / Ga naar deze website om de handleiding en garantie te downloaden / Aby pobrać instrukcję obsługi i gwarancję, odwiedź tę stronę / Kasutusjuhendi ja garantii saab alla laadida sellelt veebisaidilt / Norėdami atsisiųsti instrukcijų vadovą ir garantiją, prašome apsilankyti svetainėje / Vā rugām sā descārcați manualul de instrucțiuni și garanția accesând site-ul / Priročnik z navodili za uporabo in garancijski list lahko snamete s spletne strani / Návod na použitie a záručný list si môžete stiahnuť z webovej stránky



[www.musicandstylecollection.com](http://www.musicandstylecollection.com)



©2019 Viacom International Inc.

Made for and imported by Eu.promotions Group  
– Holding Company: Eu.promotions S.r.l.,  
Via Decembrio 28, 20137 Milan, Italy

## EARPHONES WITH MICROPHONE



## Specifications:

Driver Unit:  $\Phi 14\text{mm} \pm 1\text{mm}$   
Impedance:  $32\Omega \pm 3\Omega$   
Wire length:  $110\text{cm} \pm 5\text{cm}$   
Plug type: jack 3.5mm  
Sensitivity:  $103\text{db} \pm 3\text{db}$   
Frequency: 20Hz-20KHz  
Weight:  $10\text{g} \pm 3\text{g}$

## Quick Start Guide\*:



Press to play music and to pause.  
Double press for next song.  
Triple press for previous song.  
When a call comes, press to answer the call,  
and press again to hang up.  
Long press to reject call.

\*These are general rules.  
There may be some discrepancies between the button  
functions on different devices.



## WARNING!

- When using electrical units, basic safety precautions should always be followed.
- This product is intended for domestic use only.
- This product is not a toy. Supervise children when using the equipment.
- Keep the product away from sharp edges that could cause damage.
- Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.
- Keep the product away from flammable materials.
- Do not immerse the product in water or any other liquid.
- Do not operate the product with wet hands.
- Do not use the product for anything other than its intended use.
- Listening at high volume levels, particularly over extended periods of time, may damage your hearing.
- Do not attempt to disassemble the product, as this may cause damage to the product.
- Exposing this product to extremely high or low temperatures will shorten the life and/or distort contained plastic parts.
- Do not dispose of the product in a fire, as it will result in an explosion.
- This product must not be disposed of or dumped with your other household waste.

## IMPORTANT!

- For traffic safety, do not use earphones while driving or cycling.
- This item may deteriorate due to long-term storage or use.

## Care and Maintenance

- Wipe this product with a soft, damp, lint-free cloth and allow to dry thoroughly.
- Do not use any abrasive cleaning solvents to clean the product, as this can cause damage.