

## WARRANTY

- Congratulations on the purchase of your new product. We wish you many years of listening pleasure.
- This warranty is valid for 12 months from the purchase date and applies to products that present a lack of conformity, provided that the product is used correctly, respecting its intended use and as provided in the instruction manual.
- During the warranty period, once the technical nature of the problem is proven, the product will be substituted.
- This warranty does not cover defects which are a result of: 1) damage caused by accident, unreasonable use or neglect; 2) damage resulting from failure to follow instructions contained in your owner's manual; 3) deterioration of components, the nature of which has become worn or weakened with use.

## HOW TO OBTAIN WARRANTY SERVICE

- Contact the store that sold you this product.
- To validate your right to this warranty, you must provide the original receipt/sales invoice, as proof of ownership and date of purchase.

[www.musicandstylecollection.com](http://www.musicandstylecollection.com)

To download the instruction manual and the warranty, please visit this website / Vi invitiamo a scaricare il manuale di istruzioni e la garanzia collegandosi al sito / Um die Bedienungsanleitung und garantie herunterladen besuchen Sie bitte folgende Webseite / Pour télécharger le manuel d'instructions et la garantie, veuillez visiter ce site Web / Lietošanas instrukcija un preces garantija atrodama mājas lapā / Для загрузки инструкции по использованию и гарантии зайдите на сайт / За да изтеглите ръководството за употреба и гаранцията, моля посетете / A használati utasítás és a garancia letöltéséhez kérem látogassa meg a weboldalt / Na následujícím odkazu si můžete stáhnout kompletní návod včetně záručních podmínek / Para baixar o manual de instruções e la garantia, visite este site / Para descargarse el manual de instrucciones y la garantía, visite este sitio web / Ga naar deze website om de handleiding en garantie te downloaden / Aby pobrać instrukcję obsługi i gwarancję, odwiedź tę stronę / Kasutusjuhendi ja garantii saab alla laadida sellelt veebisaidilt / Norėdami atsisiųsti instrukcijų vadovą ir garantiją, prašome apsilankyti svetainėje / Vă rugăm să descărcați manualul de instrucțiuni și garanția accesând site-ul / Priročnik z navodili za uporabo in garancijski list lahko snamete s spletne strani / Návod na použitie a záručný list si môžete stiahnuť z webovej stránky



[www.musicandstylecollection.com](http://www.musicandstylecollection.com)



©2019 Viacom International Inc.

Made for and imported by Eu.promotions Group  
– Holding Company: Eu.promotions S.r.l.,  
Via Decembrio 28, 20137 Milan, Italy



**WIRELESS  
EARPHONES  
WITH  
MICROPHONE**



## Specifications:

Bluetooth: V4.2 (Only support BDR+EDR)

Bluetooth wireless frequency range: 2402-2480MHz

Battery capacity: 70mAh

Play time: ≈4-5H

RF amplifier: ≤10dB

Charging time: ≈2H

Driver Unit: Φ10mm

Sensitivity: 103db±3db

Impedance: 32Ω±3Ω

Frequency: 20Hz-20KHz

Transmission Range: ≥10M

Weight: 14g±3g

Input: 5V/0.5A

## Accessories:

1. Usb charging cable (L=50cm)



2. Ear tips




## ATTENTION!

Please full charge the device before starting it up for use for the first time.

Please do not use it while charging, because this could affect the battery life.

Remark: 5 minutes after starting up, if no any connection, it shutdowns automatically.

## Quick Start Guide\*:

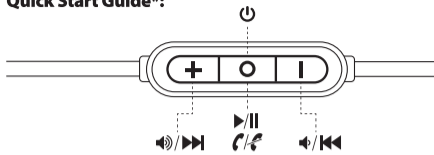

- Long press 2 seconds to power on and press 2 seconds again to power off. When turning on the earphones, red and blue lights flash alternately.

Connect to Bluetooth device. Choose "MTV Earphones" on your device to connect. After connecting to Bluetooth, the blue light flashes slowly.

- Press to play music and to pause. When playing music, the blue light flashes slowly. When music is paused, the blue light flashes slowly.  
Press to answer the call, and press again to hang up. Long press to reject call. Double press to dial last call.

- ⊕ Press for next song, long press for volume up.


- ⊖ Press for previous song, long press for volume down.

Connect USB charging cable to charge the battery. When charging, the red light will stay on. The red light goes out when it is fully charged.

\*These are general rules.  
There may be some discrepancies between the button functions on different devices.

## How to wear the Earphones:

1. Select the right ear tips size
2. Wear behind the neck
3. When not in use, connect the earphones in front of your neck, using the magnets to avoid dangling.

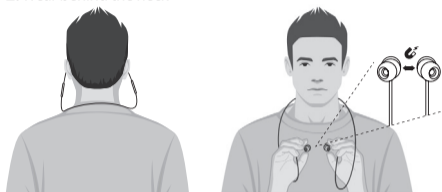

## WARNING!

- When using electrical units, basic safety precautions should always be followed.
- This product is intended for domestic use only.
- This product is not a toy. Supervise children when using the equipment.
- Keep the product and USB cable away from sharp edges that could cause damage.
- Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.
- Keep the product away from flammable materials.
- Do not immerse the product in water or any other liquid.
- Do not operate the product with wet hands.
- Do not use the product for anything other than its intended use.

- Do not use with any accessories other than those supplied.
- Listening at high volume levels, particularly over extended periods of time, may damage your hearing. Always turn off the product after use and before any cleaning or maintenance.
- Do not charge for prolonged periods of time.
- Do not use any charger other than that specifically provided for use with the product.
- This product is fitted with a rechargeable battery (non-removable).
- Do not attempt to disassemble the product, as this may cause damage to the product.
- Exposing this product to extremely high or low temperatures will shorten the life of the battery and/or distort contained plastic parts.
- Do not dispose of the product in a fire, as it will result in an explosion.
- This product must not be disposed of or dumped with your other household waste.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or else.

## IMPORTANT!

- For traffic safety, do not use earphones while driving or cycling.
- The ear tips may deteriorate due to long-term storage or use.

## Care and Maintenance

- Wipe this product with a soft, damp, lint-free cloth and allow to dry thoroughly.
- Do not use any abrasive cleaning solvents to clean the product, as this can cause damage.